



[PRODUCTS](#) [SUPPORT](#) [MEDIA / EVENTS](#) [PRODUCT REGISTRATION](#)

[WHERE TO BUY](#) [Home](#) > [Support](#) > [Technical Support Knowledge Base](#) > [Knowledge Base Article](#)

Knowledge Base Article 743G461664

Issue

How do I enable my IC-2820 for cross-band repeater operation?

Resolution

1. Press and hold both left and right MAIN dials then the F/LOCK key together. After 2 beeps the lock key will flash on the upper right of the display

When in crossband, the VHF is on the left, UHF on the right.

2. Repeat step 1 to return for simplex operation.

Category

Amateur : Mobile Dual / Tri Band : 2820H

[terms of use](#) [contact us](#) [about icom](#) ©2007 Icom America Inc. The Icom logo is a registered trademark of Icom Inc.

Icom America Inc.